

# QUICK PROGRAMMING GUIDE FOR ILT MOTORS

## Setting the limits



1) Plug Modular cable from motor into jack.



2) Check the direction, if incorrect: Press and hold the stop button until the shade jogs.



### To set UPPER limit:

Move the switch to the UPPER position. Push the UP button to raise to the desired position, then return switch to the middle position.



### To set LOWER limit:

Move the switch to the LOWER position. Push the DOWN button to lower to the desired position, then return switch to the middle position.